

INSTRUCTION MANUAL

Smart WiFi Switch L6

You will need Nous Smart Home App. Scan the QR code or download it from [direct link](#)




Checklist before using the device:

- Your smart phone or tablet has connected to a 2.4G WiFi with internet.
- You have the correct WiFi PWD
- Your smart phone or tablet must have access to App Store Google Play.
- Your router is MAC-open

User Guide

- Start with "Nous Smart Home" APP.
- Register an Nous Smart Home If your have Nous Smart Home just log in.
- Power on
- ON/OFF operating principle: The connected appliances work/stop through live wire power on/off.

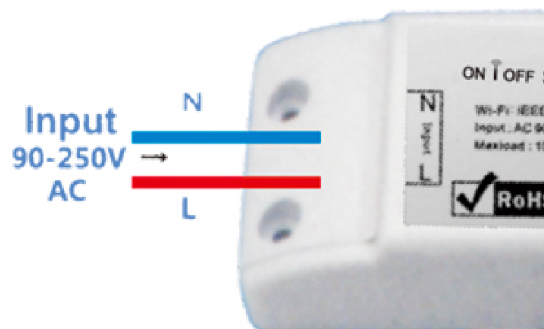

Appliance wiring instruction



Ceiling lamp wiring instruction




One wire wiring instruction



Note: The WiFi Switch must be powered up by N and L wires

- Press and hold the button for about 7 seconds until the WiFi green LED blinks fast.

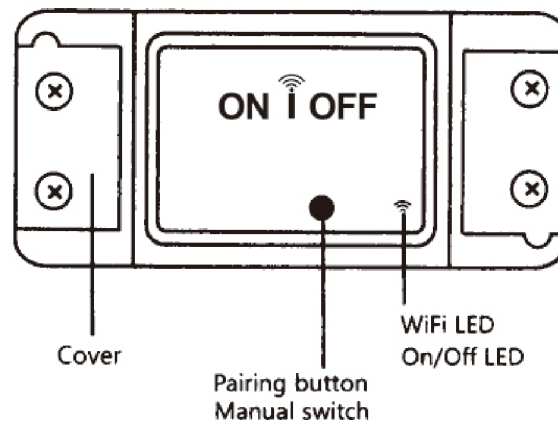

- Enter the App, tap "+" in the upper right of the page to enter network connection page.
- There are two network connection methods (Normal mode and AP mode). Normal mode is default. Users could tap the upper right corner to switch the connection method to AP mode.
- Please make sure the device's indicator light rapidly flashes (2 times per second), tap to go on to the next step.
- If indicator light is not rapidly flashing, tap "how to set indicator light as rapid flashes" to view operation processes.
- Input your WiFi password.
- Name your device.
- The device is online.

Troubleshooting

Q1: How to set indicator light as rapid flashing?

- Power on device. Power off after 10s and then power on.
- Hold the reset button for 5s.
- Confirm indicator light is now rapidly flashing

Q2: How to set indicator light as slow flashing?

- Power on device. Power off after 10s and then power on.
- Hold the reset button for 5s
- Confirm indicator light is now rapidly flashing.
- Hold reset button for 5s until indicator light is slowly flashing.

The new added device needs 1min to connect to WiFi and the internet if it stays offline for a long time please judge the problem by the WiFi LED status. WiFi LED quickly blinks one time every second; WiFi Switch failed to connect to your WiFi.

- 1) Maybe you have entered wrong WiFi password.
- 2) WiFi Switch is too far away from your WiFi. Please hold it closer.
- 3) Make sure your router is MAC-open. If still failed, try to open a mobile hot spot and add again.

* This translation may be inaccurate because it was made with google translate service